


Standard 5A

Molecular Sieve

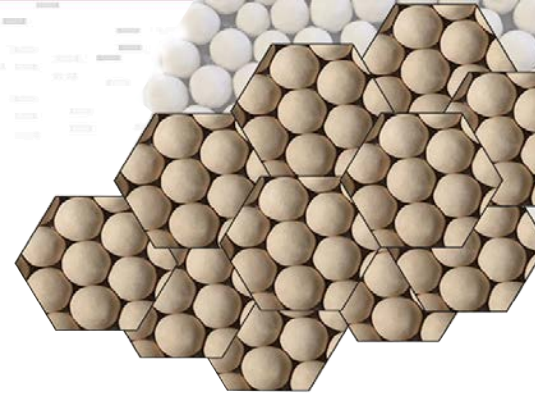

Description

Standard 5A molecular sieve can be used to remove water, carbon dioxide, and hydrocarbons from feed gas and is commonly used in air prepurification units. This molecular sieve can be used in PSA separation for paraffin and isoparaffin mixtures (n~C4~n~C6), and to purify air, oxygen, nitrogen, hydrogen, and synthesis gases from mixed gas streams. *HYD05C* also has applications as a dehydrator in industries such as liquid petroleum gas, ammonia cracked gas, and other industrial inert gas purification applications.

Specifications

Molecular Sieve					
HYD05C		Beads			
Property	Unit	4x8 Mesh	4x8 *Avg	8x12 Mesh	8x12 *Avg
Diameter	mm	2.5 - 5.0	-	1.6 - 2.5	-
Bulk Density	g/mL (<i>lb/ft³</i>)	0.69-0.75 (<i>43.1-46.80</i>)	<i>0.72 (44.78)</i>	0.72-0.78 (<i>44.9-48.7</i>)	<i>0.73 (45.65)</i>
Crush Strength	N (<i>lbm*ft/s²</i>)	≥70 (≥ <i>15.7</i>)	<i>127.1 (28.58)</i>	≥25 (≥ <i>5.6</i>)	<i>41.8 (9.4)</i>
Static H ₂ O Adsorption	wt%	≥21.5	<i>22.13</i>	≥21.5	<i>21.62</i>
Static CO ₂ Adsorption	wt%	≥15.0	-	≥15.0	-
Attrition	wt%	≤0.1	<i>0.08</i>	≤0.1	<i>0.08</i>
Moisture Content	wt%	≤1.5	<i>0.39</i>	≤1.5	<i>0.50</i>
Packaging	Beads	1,000kg (<i>2,204.6lb</i>) / Super Sack		150kg (<i>330.7lb</i>) / Drum	

*Avg refers to a 12 month average of lot analyses

Industries Used

natural gas dehydration
 synthesis gas
 inert gas purification

petroleum gas dehydration
 oxygen production
 paraffin separation

cracked gas dehydration
 hydrogen production

Storage

As an adsorbent, molecular sieve should not be left exposed to open air and should be stored in dry conditions with air-proof packaging. This product should not be exposed to temperatures exceeding 350°C (*662°F*).

Connect with us...

Hengye Inc.
 11999 Katy Frwy, Suite 588
 Houston, Texas 77079
Office (832) 288-4288
Fax (832) 288-4230
info@hengyeinc.com



ISO 14001:2004